

Table of Contents

Introduction	2
Safety instructions and important notes	3
Description	6
Operation	8
Cleaning the appliance and removal of limescale deposits	11
Technical specifications	12
Explanation of symbols used on the product, its accessories and packaging	12

Introduction

- The Bayby BBW 2020 Multi-function Baby Bottle Warmer is a unique aid for caring for and feeding your baby. This single appliance offers 4 functions:
- **Baby bottle warmer**
 - Easy to use for quickly warming up milk.
- **Food warmer**
 - Heats up baby food and other additional food within a few minutes.
- **Steam cooking** You can also use the steam cooking function to cook meals.
- **Sterilises bottles or their accessories.**
 - Sterilise baby bottles as well as accessories such as baby bottle nipples, lids and other parts of the baby bottle.

Safety instructions and important notes

- Only use the baby bottle warmer in accordance with the instructions included in this user's manual. Not adhering to these instructions may result in the incorrect operation of the bottle warmer or its damage. Keep this user's manual for future use.
- Only use the appliance indoors and do not expose it or its accessories to direct sunlight.
- Keep this appliance and the power cord out of reach of children that are younger than 8 years of age.
- Do not submerge the power cord, plug or the appliance in water or in any other liquid.
- Do not leave the power cord in the vicinity of hot surfaces.
- Only connect the appliance to a grounded power socket. Always check that the plug is properly inserted into the power socket.
- Before connecting the appliance, check that the voltage specified on the bottom part of the appliance corresponds to the voltage in the local power grid.
- If it is necessary to use an extension cord, check that the power cord is grounded with a nominal value of at least 10 amperes.
- Do not use the appliance if the power plug, power cord or the appliance itself is damaged. If the power cord is damaged, have it replaced at an authorised service centre to avoid a possibly dangerous situation.

- Do not place the appliance on a hot gas or electric stove or a hot oven or in their vicinity.
- The appliance may be used by children up to 8 years of age and persons with limited physical, sensory or mental abilities or by persons with insufficient experience and knowledge only when under supervision or after they have been instructed about the safe use of the appliance and when they are aware of all risks associated with using the appliance. Cleaning and user maintenance must not be performed by children younger than than 8 years of age and that are unsupervised. Children must not play with the bottle warmer.
- Clean the bottle warmer according to the instructions contained in chapter Cleaning the appliance and removal of limescale deposits.
- Do not preheat the appliance.
- Hot water may cause serious scalding. So be very careful when there is hot water inside the bottle warmer.
- Accessible surfaces of the appliance may heat up during operation. The lid is hot after use, be careful, scalding hazard.
- Do not move the appliance if it contains hot water.
- As soon as the food or milk reaches the required temperature, remove the bottle or container from the bottle warmer. If you leave the food or milk in the bottle warmer, its temperature will rise.

- Before you start feeding a child, always check the temperature of the food.
- Do not touch the bottle warmer if it accidentally falls into the water. Immediately disconnect the power plug from the power socket and do not use the appliance. Contact an authorised service centre.


**Attention:**

Do not leave the bottle warmer without supervision when it is connected to a power socket.

- When not using the appliance, disconnect it from the power socket.
- Before cleaning and after every use, allow the appliance to cool down.
- Follow the instructions for removing limescale deposits to prevent irreparable damage.
- Do not attempt to open or repair the appliance yourself. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- We recommend saving the original box, packaging material, receipt and responsibility statement of the vendor or warranty card for the duration of warranty. It is appropriate to move the bottle warmer in its original box.


Description

Description of the product

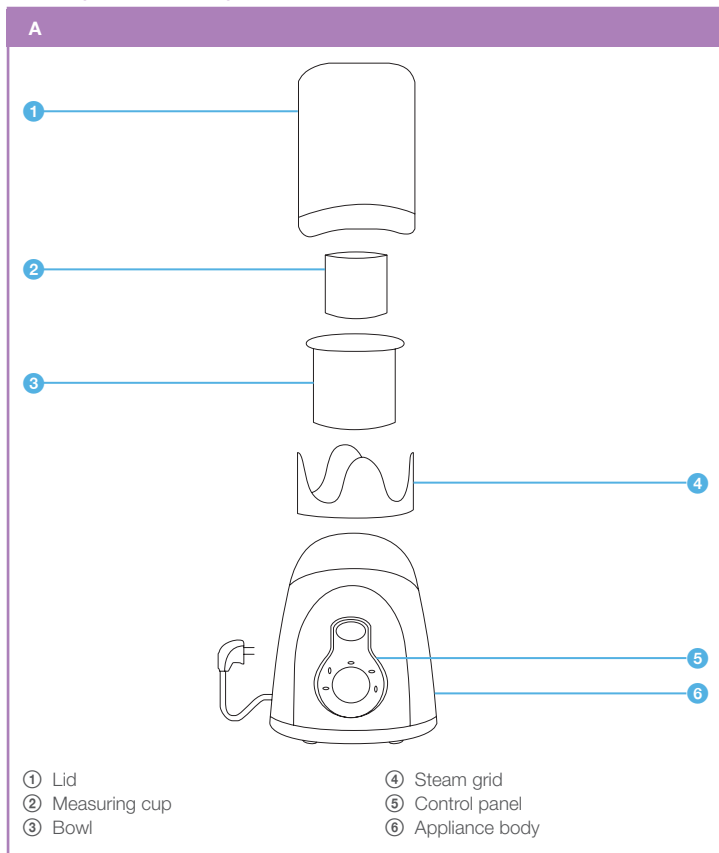

- All parts, except for the stainless steel heating plate, contained inside the body of the appliance A⑥ are made from a material that does not contain BPA (Bisphenol A).

Description of the control panel

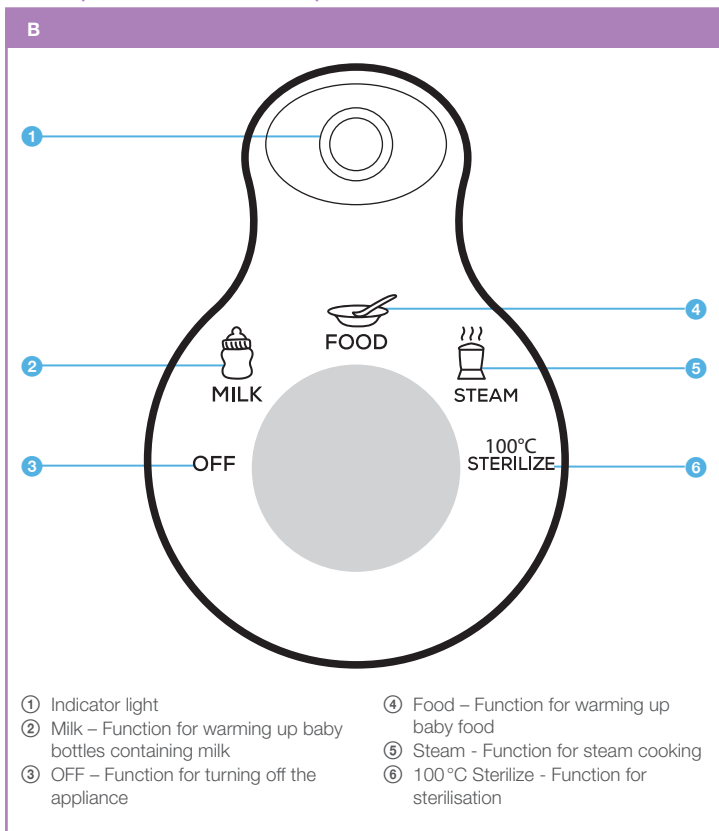

Operation



Attention:

Never use the bottle warmer without water in the heating tank!

- Stand the bottle warmer on a horizontal and stable surface.
- The steam that is released during the warming process is hot. Keep your hands away during the warming process.
- Never use the appliance without the steam grid A④ located inside the body of the appliance A⑥!

Warming up baby bottles

- Pour 110ml of water into the body of the appliance A⑥, into which you have placed the steam grid A④.
- Place the baby bottle inside the body of the appliance A⑥ and close the lid A① of the bottle warmer. Check that the lid A① has properly adhered to the body of the appliance A⑥.
- Always place a fully assembled baby bottle into the bottle warmer including its screw top and nipple (without the dust cap). Make certain that you pour water into the bottle warmer before turning it on.
- Never allow water to rise above the neck of the bottle or to spill over the edge of the bottle warmer.
- Check that the control dial on the control panel A⑤ is in the "OFF" position B③ and plug the bottle warmer into a power socket.
- Select the warming method by turning the control dial right towards the symbol "MILK" B②.
- The indicator light B① signals that the bottle warmer is running and will shut off automatically when the temperature in the bottle warmer reaches 40°C. This is the expected water temperature around the bottle. This is not the food temperature.
- After reaching 40°C, the water temperature is maintained at the same level until the appliance is turned off by turning control dial left towards the symbol "OFF" B③.
- If you decide to immediately use the bottle warming function again, it is necessary to first allow the appliance to cool down completely. Other functions of the bottle warmer operating at higher temperatures – warming up baby food, steam cooking or sterilisation can be used immediately after warming up baby bottles.
- Always test the food once it reaches the desired temperature, immediately remove it from the bottle warmer.
- Shake the baby food or milk after taking it out of the bottle warmer. Check the temperature of the food or milk by dripping a little on your wrist.

Note:

The time necessary for warming up the milk depends on the amount of milk being warmed up and its initial temperature, for example room temperature (20°C) or the temperature after being removed from a refrigerator (5°C). The time intervals for warming up glass bottles and polypropylene bottles (PP) may differ.

Heating up baby food

- Pour 110ml of water into the body of the appliance A⑥, into which you have placed the steam grid A④.
- Place the bowl with the food A③ or the baby food in a glass jar into the body of the appliance A⑥ and close the lid A① of the bottle warmer. When warming up baby food in a glass jar, open the glass jar containing the baby food, remove its lid and any labels.
- Check that the lid A① has properly adhered to the body of the appliance A⑥.
- Check that the control dial on the control panel A⑤ is in the "OFF" position B③ and plug the bottle warmer into a power socket.
- Select the warming method by turning the control dial right towards the symbol "FOOD" B④.
- The indicator light B① signals that the bottle warmer is running and will shut off automatically when the temperature in the bottle warmer reaches 65°C. This is the expected water temperature around the food container. This is not the food temperature.
- After reaching 65°C, the water temperature is maintained at the same level until the appliance is turned off by turning control dial left towards the symbol "OFF" B③.
- If you decide to immediately use the food warming or bottle warming function again, which are processes that run at lower lower temperatures, it is necessary to first allow the appliance to cool down completely. Other functions of the bottle warmer operating at higher temperatures – steam cooking or sterilisation can be used immediately after warming up baby food.
- After warming up the food, stir it and use a spoon to check that it is not too hot before serving it to a child.

Note:

The warming time depends on the amount of food being warmed up, its consistency and its initial temperature, for example room temperature (20°C) or the temperature after being removed from a refrigerator (5°C).

Steam cooking

- Pour 20ml of water into the body of the appliance A⑥, into which you have placed the steam grid A④.
- On to the steam grid A④, place the food that you have cut up in advance and which you wish to steam cook, e.g. carrot, broccoli, potatoes, etc.

- Close the lid A① of the bottle warmer and check that the lid A① has properly adhered to the body of the appliance A⑥.
- Check that the control dial on the control panel A⑤ is in the "OFF" position B③ and plug the bottle warmer into a power socket.
- Select steam cooking function by turning the control dial right towards the symbol "STEAM" B⑤.
- The indicator light B① signals that the bottle warmer is running and will shut off automatically when the food is cooked.
- When you have finished steam cooking, turn off the appliance by turning the control dial left towards the symbol "OFF" B③.

Note:

The cooking time may differ depending on the initial food temperature and its consistency and amount. The amount of water can be adjusted depending on the amount of food. If you find that the food is not completely cooked, next time you can pour more water into the bottle warmer.

- If you decide to immediately use the bottle warmer again for any other function, it is necessary to first allow it to cool down completely.
- Be very careful not to scald yourself when removing food from the bottle warmer.
- Before serving the food to a child, check that it is not too hot.

Sterilisation

- Pour 40ml of water into the body of the appliance A⑥, into which you have placed the steam grid A④.
- Place the baby bottle without the nipple, screw ring or cap on to the steam grid A④ with the bottom facing upwards so that the bottle neck points towards the steam grid A④.
- You may also use the appliance to sterilise accessories such as nipples, dummies, etc. Place them on the steam grid A④.
- Close the lid A① of the bottle warmer and check that the lid A① has properly adhered to the body of the appliance A⑥.
- Check that the control dial on the control panel A⑤ is in the "OFF" position B③ and plug the bottle warmer into a power socket.
- Select the sterilisation function by turning the control dial right towards the symbol "100 °C STERILIZE" B⑥.
- The indicator light B① signals that the bottle warmer is running and will shut off automatically when sterilisation is complete.
- When you have finished steam cooking, turn off the appliance by turning the control dial left towards the symbol "OFF" B③.
- Be very careful not to scald yourself when removing sterilised items from the bottle warmer, they may be hot.

Cleaning the appliance and removal of limescale deposits

Cleaning

- After every use, disconnect the bottle warmer from the power socket and allow it to cool down.
- For hygiene reasons, pour the water out of the bottle warmer.
- Clean the outer and inner side of the bottle warmer using a damp cloth.



Attention:

Do not clean the bottle warmer, its parts or its accessories using abrasive products, chemical solvents, cleaning products, alcohol or sharp utensils.

Note:

If you used the bottle warmer to warm up baby food or steam cooking, check that there are no spilled baby food remains inside it.



Attention:

Never place the bottle warmer directly under running water or submerge the appliance or its parts and accessories in water or other liquids!

- Never wash the bottle warmer in a dishwasher!
- You may clean the cap A①, the measuring cup A②, the bowl A③ and the steam grid A④ using a sponge or cloth dipped in soapy water or you can wash it in a dishwasher if you place them in the top dishwasher rack.

Removing limescale deposits

- Disconnect the bottle warmer from the power socket and allow it to cool down.
- It is recommended to remove limescale deposits from the bottle warmer every 4 weeks to ensure further effective operation of the appliance.
- Mix 100ml of white vinegar with 100ml of hot water and pour this solution into the body of the appliance A⑥. Allow this solution to act for approximately 30 minutes and then pour it out.
- Never turn on the bottle warmer while the water and vinegar solution is in the body of the appliance A⑥.

- After emptying out the bottle warmer, repeatedly clean the outer and inner side of the bottle warmer using a cloth. In the event that despite this limescale deposits continue to appear, repeat the limescale removal procedure.

Technical specifications

Model number BBW 2020

Voltage and power input of the appliance 230 V ~ 50 Hz, 150 W

Protection class against injury by electrical shock Protection class I.

Operating conditions Ambient temperature: 7 °C to 37 °C

Explanation of symbols used on the product, its accessories and packaging



This symbol indicates "Important notice".



This symbol indicates that prior to using the product, the user should read the user's manual.



This symbol indicates that this appliance meets all the basic requirements of EU directives related to it.



This symbol serves to designate the production lot number.



This symbol indicates that a fee has been paid to an organisation performing recollection and utilisation of the packaging waste.



This symbol indicates the material from which the packaging is made.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

Instructions and information about the handling of used packaging

Dispose of used packaging material at a site designated for waste in your municipality.

The Czech language is the original version of the user's manual. Changes to text and technical parameters are reserved.