

## Table of Contents

Introduction .....	4
Safety instructions and important notes .....	5
Description .....	8
Operation .....	10
Sterilisation .....	10
Cleaning the appliance and removal of limescale deposits .....	12
Technical specifications .....	13
Explanation of symbols used on the product, its accessories and packaging .....	13
Instructions and information about the handling of the used packaging and product .....	13
Warranty conditions .....	14

## Introduction

- The BBS 3020 Multifunction Digital Steam Steriliser is a great helper in your household. It has a large capacity and apart from sterilisation, it enables you to steam cook healthy meals for yourself and your baby.
- Enables the rapid sterilisation of 6 baby bottles incl. accessories (nipples, tops, etc.) within 10 minutes.
- The sterilisation cycle function makes it possible to set sterilisation in 6 or 12 hours, which enables you to have sterilised items ready for immediate use when you need them.
- The steam cooking function is intended for cooking meals in steam, which is the healthiest way of cooking food. Food prepared in this way will retain its vitamins and nutrients important for health. Gently steamed fruit and vegetables are particularly suitable for children just starting with a solid diet.
- The digital LCD screen on the control panel informs you about the process and enables easy control of the appliance.

## Safety instructions and important notes


- Only use the appliance in accordance with the instructions included in this user's manual. Not adhering to these instructions may result in the incorrect operation of the steriliser or its damage. Keep this user's manual for future use.
- Never submerge the base unit, power cord or power plug in water or in any other liquid.
- The appliance may be used by children up to 8 years of age and persons with limited physical, sensory or mental abilities or by persons with insufficient experience and knowledge only when under supervision or after they have been instructed about the safe use of the appliance and when they are aware of all risks associated with using the appliance. Cleaning and user maintenance must not be performed by children younger than 8 years of age and that are unsupervised. Children must not play with the steriliser.
- Clean the appliance according to the instructions contained in chapter Cleaning the appliance and removal of limescale deposits. In the event that limescale deposits are not removed according to the instruction in the user's manual, permanent damage may result.
- Do not preheat the appliance.
- Keep the appliance and the power cord out of children's reach.
- Before connecting the appliance to the power grid, check that the voltage specified on the appliance corresponds to the voltage in the local power grid.
- If you discover a defect on the power plug, power cord or on the appliance, stop using it.
- In the event that the power cord is damaged, it must be replaced by an authorised service centre to prevent potential hazards.
- Do not attempt to repair the appliance yourself. Contact an authorised service centre.
- The appliance heats up to a high temperature during operation and may cause burns.

- Be careful of the hot steam escaping from the openings in the lid and also of the steam released when the lid is removed.
- Steam may cause burns.
- Do not touch the appliance while it is running or shortly thereafter because these parts are very hot. Only lift the lid by the handle.
- Never move the appliance or open it while it is running or the water inside it is still hot.
- Do not place any items on to the appliance while it is in operation.
- Only use water free of additional agents. Do not use mineral water as the dissolved minerals will cause limescale deposits to form.
- Do not put bleach or other chemicals into the appliance.
- Only sterilise bottles and accessories suitable for sterilisation. Before sterilisation, carefully study the manuals of the respective items and check that they are suitable for sterilisation. Do not sterilise items that are filled with water, for example pieces for teething with cooling fluid.
- The appliance is intended exclusively for indoor use.
- Never use any accessories or parts from other manufacturers. The use of such parts or accessories shall void the warranty.
- Do not subject the appliance to extreme heat or direct sunlight.
- Allow the appliance to fully cool down before storing or moving it.
- When the appliance is turned on, do not place items directly on to the heating element.
- Do not use the appliance if it has fallen or if you discover any type of damage. Entrust repairs to an authorised service centre.
- Always place and use the appliance on a dry, stable, level and horizontal surface.
- Do not place the appliance on a hot surface.
- Do not leave the power cord hanging over the edge of a table or countertop on which it is placed.
- After you have finished using the appliance and it has cooled down, always pour out the water that remains inside.
- Always disconnect the appliance when you have finished using it.

- After using the steriliser, wait at least 5 minutes for it to cool down before removing its lid **A①**.
- The appliance is not intended for defrosting meals, steaming frozen meals, steaming blended meals, cooking pasta or rice, heating liquids, e.g. soups, keeping meals warm for several hours or for reheating meals.


## Description

### Description of the product

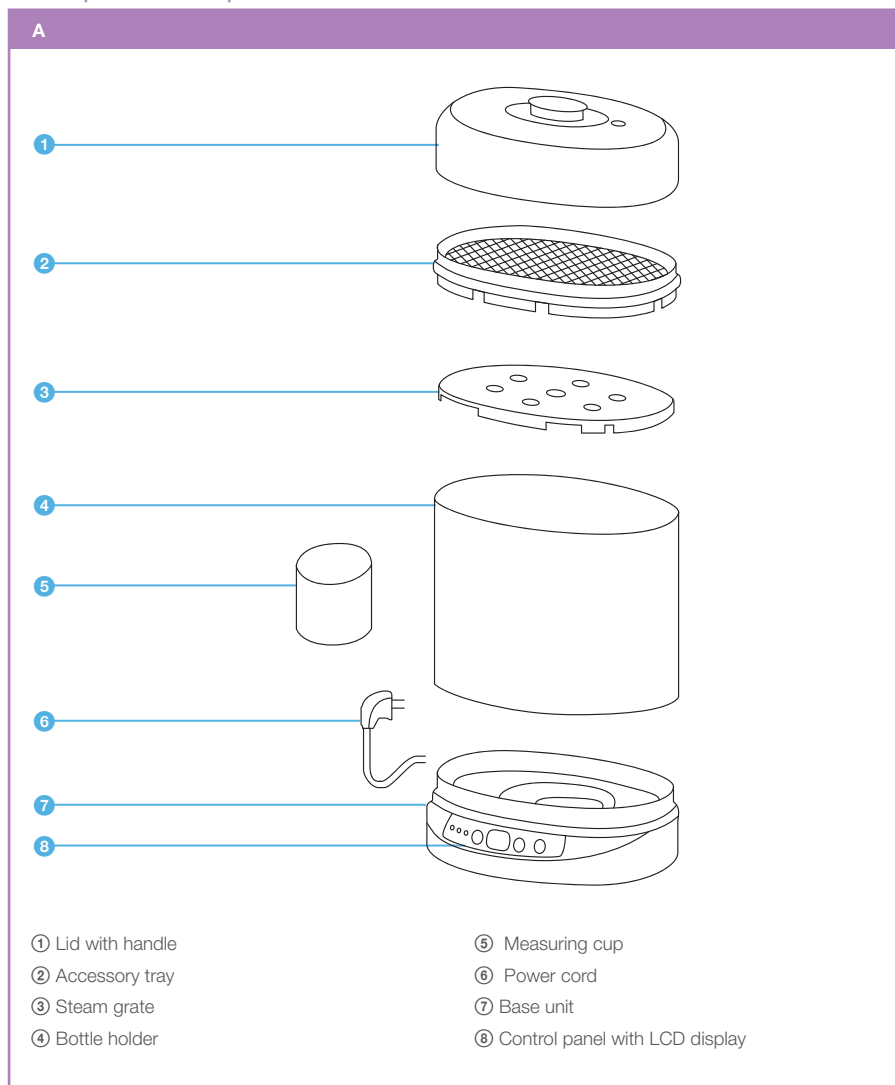

All parts, except for the stainless steel heating plate, are made from a material that does not contain BPA (Bisphenol A).

## Description of the control panel

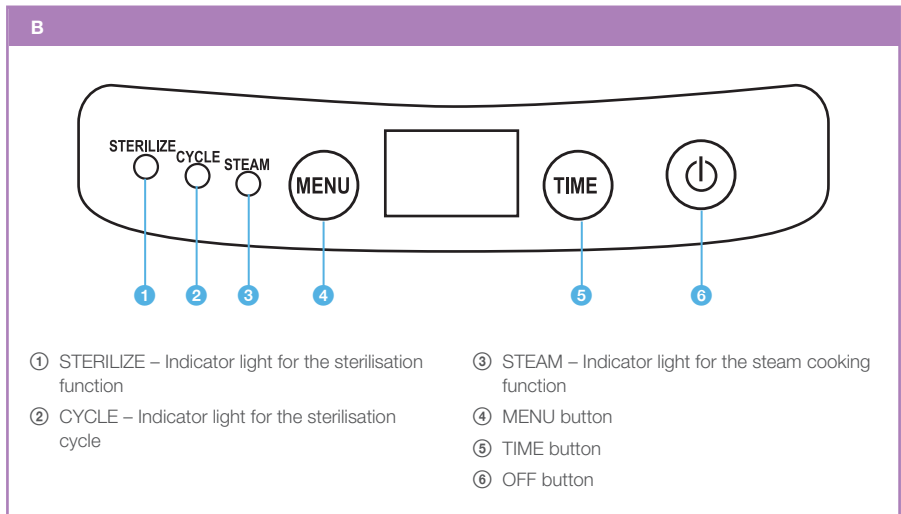

## Operation



### Attention:

Never use the appliance without water inside the steriliser!

The steam that is released during the sterilisation process is hot. Keep your hands away from the appliance while it is running.

## Sterilisation

- Before sterilising bottles and accessories, thoroughly wash them with a bottle brush and accessories in hot water using a detergent suitable for children, rinse thoroughly and allow to dry.
- Remove the lid A① of the appliance, remove the bottle holder A④ from the base unit A⑦ and remove the steam grate A③.
- Into the bottle holder A④, insert baby bottles with the bottom facing upwards so that their necks are inserted into the respective openings in the bottle holder A④.
- Place the bottle holder A④ on to the base unit A⑦.
- On to the accessory tray A②, place items that you wish to sterilise, such as nipples, bottle screw rings, bottle caps.
- Use the included measuring cup to measure out 90 ml of water and pour it into the base unit A⑦.
- Seat the accessory tray A② on to the bottle holder A④ and close the lid of the appliance A①.
- Plug the power cord A⑥ into a power socket. The appliance will then automatically light up the control panel LCD display A⑧ and show the initial value "00".
- Press 1x the button "MENU" B④. The sterilisation process will start automatically immediately after the indicator "STERILIZE" B① flashes for 5 seconds and will then remain lit for the entire duration of the sterilisation process.
- The total sterilisation process takes approximately 10 minutes. The initial value of "10" is shown on the control panel LCD display A⑧ and counts down every minute. After 10 minutes of the total sterilisation process, the control panel LCD display A⑧ will show the initial value of "00" and the light indicator "STERILIZE" B① will turn off. A sound is also made, indicating the end of the process.
- Disconnect the appliance from the socket and wait until it cools down completely. Only then take off the lid using handle A①. Be careful, steam may come out of the appliance.
- When removing items out of the appliance, be very careful because they may still be hot.

### Note:

Thoroughly wash your hands before touching any sterilised items.

- If the sterilised items are not used in the 3 hours following sterilisation, we recommend to sterilise them again.
- Pour out all remaining water from the base unit A⑦ and wipe it dry.

## 6-hour / 12-hour sterilisation cycle

- Before sterilising bottles and accessories, thoroughly wash them with a bottle brush and accessories in hot water using a detergent suitable for children, rinse thoroughly and allow to dry.
- Remove the lid A① of the appliance, remove the bottle holder A④ from the base unit A⑦ and remove the steam grate A③.
- Into the bottle holder A④, insert baby bottles with the bottom facing upwards so that their necks are inserted into the respective openings in the bottle holder A④.
- Place the bottle holder A④ on to the base unit A⑦.
- On to the accessory tray A②, place items that you wish to sterilise, such as nipples, bottle screw rings, bottle caps.



- Use the included measuring cup to measure out 270 ml of water and pour it into the base unit A⑦.
- Seat the accessory tray A② on to the bottle holder A④ and close the lid of the appliance A①.
- Plug the power cord A⑥ into a power socket. The appliance will then automatically light up the control panel LCD display A⑧ and show the initial value "00".
- Press 2x the button "MENU" B④. The sterilisation process will start automatically immediately after the indicator "CYCLE" B② flashes for 5 seconds and will then remain lit for the entire duration of the sterilisation process. The control panel LCD display A⑧ shows 6h for a 6-hour sterilisation cycle. For a 12-hour sterilisation cycle, 1x press the button "TIME" B⑤ and the control panel LCD display A⑧ will show 12 h. By repeatedly pressing button "TIME" B⑤ you can toggle between the 6h and 12h sterilisation cycle.
- The sterilisation process takes 18 minutes. The initial value of "18" is shown on the control panel LCD display A⑧ and counts down every minute. After 18 minutes of the complete sterilisation process, a sound is made 1x, indicating the end of the sterilisation process. Immediately thereafter, the appliance switches to the selected sterilisation cycle of 6h or 12h. The light indicator "CYCLE" B② is lit for the entire duration of the sterilisation cycle.
- If, at the end of the sterilisation cycle, you do not turn off the appliance using button "Off" B⑥, it will repeat the selected sterilisation cycle 6 h or 12 h for a total of 4x cycles.
- You may turn off the appliance at any time using button "Off" B⑥.
- When all the sterilisation cycles have finished, the appliance will automatically switch to the stand-by mode, the indicator light will turn off and the control panel LCD display A⑧ will show "00".
- If there is an insufficient amount of water in the appliance during the repeated sterilisation cycle, the appliance will turn off automatically.
- Disconnect the appliance from the socket and wait until it cools down completely. Only then take off the lid using handle A①. Be careful, steam may come out of the appliance.
- When removing items out of the appliance, be very careful because they may still be hot.

**Note:**

Thoroughly wash your hands before touching any sterilised items.

- If the sterilised items are not used in the 3 hours following sterilisation, we recommend to sterilise them again.
- Pour out all remaining water from the base unit A⑦ and wipe it dry.

## Steam cooking

- Due to various consistencies and amounts of food, the amount of water used for steam cooking may vary.
- Pour the below indicated amount of water into the bottle holder A④ located on the base unit A⑦.
  - 90 ml of water for steam cooking for a period of 15 min.
  - 180 ml of water for steam cooking for a period of 15–30 min.
  - 270 ml of water for steam cooking for a period of 30-45 min.
  - 360 ml of water for steam cooking for a period longer than 45 min.
- Place the steam grate A③ on to the bottle holder A④ so that protruding surfaces (wheels and edges) point downwards towards the base unit A⑦.
- On to the steam grate, place the food that you wish to steam cook. We recommend that you cut the food into smaller pieces before putting it in.
- Seat the accessory tray A② on to the bottle holder A④ and close the lid A①.
- Plug the power cord A⑥ into a power socket. The appliance will then automatically light up the control panel LCD display A⑧ and show the initial value "00".
- Press 3x the button "MENU" B④. The steam cooking process will start automatically immediately after the indicator "STEAM" B③ repeatedly flashes then remains lit for the entire duration of the sterilisation process.

- The default steam cooking time is 10 minutes but may be change as required. If you wish to steam cook food from 10 to 15 minutes, press the button "TIME" **B⑤** 1x and another minute will be added on the control panel LCD display **A⑥**. In this way you may repeatedly press the button up to a steam cooking time of 15 minutes. If you wish to set a steam cooking time longer than 15 minutes, press the button "TIME" **B⑤** again and another 5 minutes will be added to the required steaming time. In this way you may repeatedly set the steam cooking time up to 60 minutes.
- The appliance will start cooking 5 seconds after setting the required steam cooking time. The light indicator "STEAM" **B③** remains lit for the entire duration of this function.
- For the entire cooking process, the control panel LCD display **A⑥** will show the countdown in minutes.
- After finishing steam cooking, the appliance remains in stand-by mode, the light indicator "STEAM" **B③** turns off and the control panel LCD display **A⑥** shows "00".
- Disconnect the appliance from the socket and wait until it cools down completely. Only then take off the lid using handle **A④**. Be careful, steam may come out of the appliance.
- Do not repeatedly steam or reheat food. When you wish to steam another batch of food, we recommend that you first allow the appliance to cool down for 10 minutes.
- Be careful when taking cooked food out of the appliance, it may still be hot.
- Before feeding baby food to a child, always check its temperature with the back of your hand.

## Cleaning the appliance and removal of limescale deposits

### Cleaning

- After every use, disconnect the appliance from the power socket and allow it to cool down.
- For hygiene reasons, pour out any remaining water from the steriliser unit **A⑦**.
- Clean the outer and inner side of the appliance **A⑦** using a damp cloth.



#### Attention:

Do not clean the steriliser, its parts or its accessories using abrasive products, chemical solvents, cleaning products, alcohol, sharp utensils or steel wool.



#### Attention:

Never place the steriliser directly under running water or submerge the appliance or its parts and accessories in water or other liquids!

- Never wash the appliance in a dishwasher! The lid **A①**, steam grate **A③**, measuring cup **A⑤**, and trays **A②** and measuring cup **A④** can be washed in warm water containing dishwashing detergent.
- After cleaning it, store the product in a clean dry location.

### Removing limescale deposits

- When using the appliance, small stains may appear on the heating element in the base unit **A⑦**. These are accumulated limescale deposits. The harder the water, the faster limescale deposits will form.
- Disconnect the appliance from the power socket and allow it to cool down.
- It is recommended to remove limescale deposits from the appliance every 4 weeks to ensure further effective operation of the appliance.
- Mix 50 ml of white vinegar with 50 ml of hot water and pour this solution into the appliance. Allow this solution to act for approximately 30 minutes in the base unit **A⑦** and then pour it out.
- Never turn on the appliance while the water and vinegar solution is in the base unit **A⑦**.

- After emptying out the steriliser, repeatedly clean the outer and inner side of the bottle warmer using a cloth. In the event that despite this limescale deposits continue to appear, repeat the limescale removal procedure.

## Technical specifications

Model number .....	BBS 3020
Voltage and power input of the appliance .....	220 V–240 V ~ 50/60 Hz, 400–450 W
Protection class against injury by electrical shock .....	Protection class I.
Operating conditions .....	Ambient temperature: 7 °C to 37 °C

## Explanation of symbols used on the product, its accessories and packaging



This symbol indicates "Important notice".



This symbol indicates that prior to using the product, the user should read the user's manual.



This symbol indicates that this appliance meets all the basic requirements of EU directives related to it.



This symbol serves to designate the production lot number.



This symbol indicates that a fee has been paid to an organisation performing recollection and utilisation of the packaging waste.



This symbol indicates the material from which the packaging is made.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### **For business entities in European Union states**

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

### **Disposal in other countries outside the European Union.**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

## Instructions and information about the handling of the used packaging and product

Dispose of used packaging material at a site designated for waste in your municipality.

At the end of its service life, do not throw the appliance out with ordinary municipal waste, rather take it to a recycling facility. In this way you will help protect the environment.

The Czech language is the original version of the user's manual. Changes to text and technical parameters are reserved.