

Table of Contents

Introduction	2
Safety instructions and important notes	3
Description	5
Operation	6
Cleaning and disinfection	6
Disposal	6
Explanation of symbols used on the product, its accessories and packaging	7

Introduction

- The BBS 3000 Bayby microwave steam steriliser is practical, suitable for use at home and when travelling.
- The steriliser disinfects up to 6 feeding bottles or 4 bottles with accessories within 5 minutes.
- The sterilized products are cooled down already 2 minutes after being disinfected.
- Most baby feeding bottles should be suitable for the microwave oven steriliser.
- The steriliser is suitable for microwave ovens with a power output of between 500 W and 1100 W.

Safety instructions and important notes

- Before using the steriliser, please carefully read the operating instructions. These instructions are a part of the steriliser and must always be on hand.
- Only use the steriliser for the prescribed and intended purpose.
- If you own a combination microwave oven, ensure that the steam steriliser is not subjected to baking temperatures (grill), otherwise there is a risk of damage.
- Before inserting into a microwave oven, make sure that you have poured water into the bottom bowl in the steriliser. The product must contain water for the sterilisation process to occur correctly.
- Use drinking water to prevent the formation of limescale.
- During operation, never leave the product without supervision.
- The steriliser must only be placed on a firm, level, dry and non-flammable surface.
- The steriliser must not be placed on a the hotplate of a stove, placed inside a hot oven or placed in the vicinity of various heaters.
- First check that the components that you wish to sterilise are suitable for use in microwave ovens.
- Please be aware, that after disinfection, the bottle remain sterile for the time that the steriliser remains closed. The bottles will remain sterile in the closed product for approximately 30 minutes.

Prevention against burns and scalding

- The steriliser operates at a high temperature using hot steam. To prevent burns and scalding, proceed according to the following instructions:
- The steam steriliser is very hot when it is taken out of the microwave oven. Wait at least 2 minutes for it to cool down before taking it out.
- Put on gloves before moving the steriliser from the oven to your designated location.
- Be careful when opening the lid as there is a risk of scalding by the hot steam. Open only tilted down so that the hot steam can escape.
- Remove the bottles and accessories using the provided tongs.


- Use the handles on the side of the steriliser when handling it.

For child protection

- This product may only be used under adult supervision.
- Ensure that children are not nearby when handling a hot steriliser.
- Always make sure that the product is hidden out of children's reach.
- Make sure that the plastic packaging is out of children's reach – the plastic packaging is not a toy.

Description

Description of the product

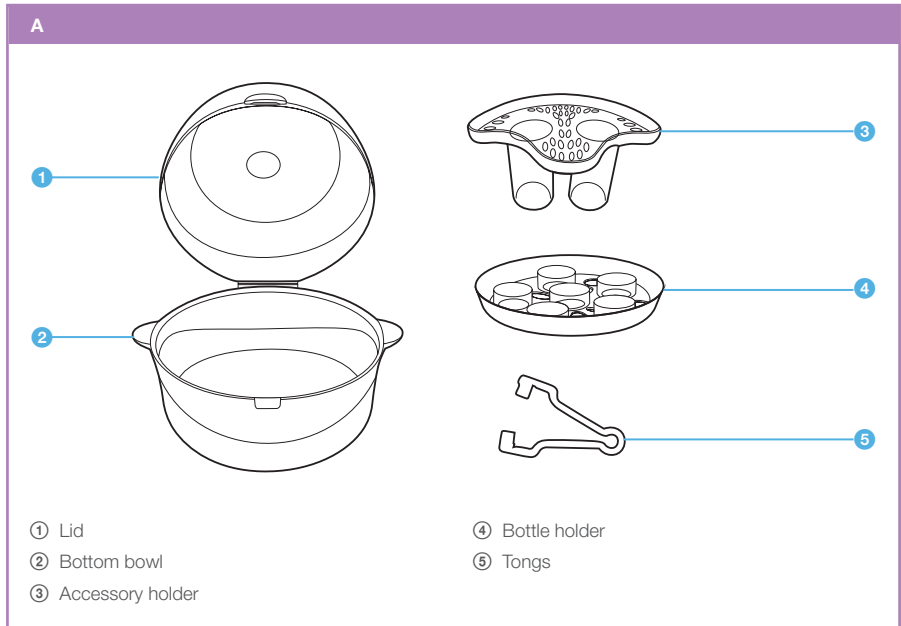

All parts are made from a material that does not contain BPA (Bisphenol A).

Description of function

- The closed microwave steam steriliser filled with water is placed in a microwave oven. When the microwave oven is turned on, the water inside the steriliser starts to boil and water begins evaporating. The created hot steam disinfected the components inside.



Attention!

All components have a heat resistance up to 120°C.

Operation

1. Carefully wash and rinse the bottles and accessories before starting the sterilisation process.
2. Open the steam steriliser by lifting the lid A①.
3. Load the bottles upside down into the provided holders A④ and place accessories such as nipples, etc. into the accessory holder A③, also upside down.
4. Pour 100 ml of water into the bottom bowl A② of the steriliser.



Attention:

The fundamental and essential thing is, that the measuring cup must be used to ensure strict adherence to the 100 ml capacity, otherwise the steriliser may be damaged.

5. Close the lid of the steriliser A① and check that it is properly closed, then check that the lock of the bottom bowl A② and lid A① has clicked in and that the product is secured against being opened.
6. Place the steam steriliser into a microwave oven.
7. Set the microwave oven to the prescribed power level and time. Do not exceed the prescribed time.

Power level	Sterilisation time
1000-1100 W	4 min
850-1100 W	5 min
800-950 W	5 min
500-800 W	7 min
500-750 W	8 min



Warning

In order to prevent scalding by hot steam or hot water, wait 2 minutes before taking the steriliser out of the microwave oven.

8. After letting it cool down for 2 minutes, take out the bottles and accessories using the tongs.

Cleaning and disinfection

- In order to prevent limescale from forming, dry out the steriliser after every use.
- The product may be washed in a dishwasher.
- When it is necessary to remove limescale deposits, use a solution of water and vinegar.

Disposal

- In the event that the product and packaging has finished serving its purpose, and you wish to throw it out, then do so according to national regulations.

Explanation of symbols used on the product, its accessories and packaging



This symbol indicates that this appliance meets all the basic requirements of EU directives related to it.



This symbol serves to designate the production lot number.



This symbol indicates that a fee has been paid to an organisation performing recollection and utilisation of the packaging waste.



This symbol indicates the material from which the packaging is made.

- Changes to text and technical parameters are reserved.